PQLab

PRIMARIUS

CDF Validation

Callback QA

DRC Testbench

LVS Testbench

Advanced PDK Verification Platform

Introduction

PQLab is an advanced PDK (Process Design Kit) verification platform. As the semiconductor manufacturing technology continues scaling down to smaller geometries, PDK complexity increases rapidly. PDK validation becomes much more complicated than ever before, while taking more time.

Primarius has developed PQLab as a complete solution based on years of experiences in advanced PDK development and verification to address this challenge.

PQLab is an automated QA software for PDKs, featuring a multitude of qualification mechanisms of PDK integrity, including technology files, PCell CDF and PCell physical verification (DRC & LVS). PQLab supports PDK verification for planar process (0.18um to 22nm) and FinFET process (16nm to 5nm), covering applications in digital logic, analog, high voltage, and RF circuits. PQLab helps foundries' PDK engineers ensure PDK quality, enabling IC designers to easily analyze and qualify foundry PDKs and benchmark between different PDK versions and design flows.



Key Advantages • Versatility

Supports the PDK format and EDA tools of mainstream Foundries

POLab

Completeness

LDE Solutions

Design Flow QA

Simulation Testbench

Pattern Generation

- Supports PCell validation and different flows like Calibre LVS+
- Full coverage of QA patterns with complete QA reports
- Supports various combinations of different models, LVS, and PEX formats
- Automation

Highly-integrated automation PDK QA environment

• Efficiency

Built-in pattern generation module for each PDK component


Flexibility

Supports test pattern user customization

Reusability

The existing PDK QA setting could be re-used in a future project.

Specifications

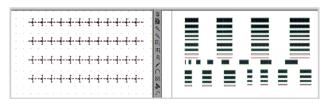

- Test pattern generation automation
- Automatically generates the test patterns for DRC, LVS, CDF, and other PDK components
- Supports CDF verification
- CDF Spec, CDF Callbacks, CDF Parameter and SPICE Model parameter consistency inspection
- Supports DRC/LVS verification
- Intelligently auto-generates the minimal set of DRC and LVS inspection test patterns to ensure proper PDK functionality for all PCell parameter combinations.
- Supports comprehensive simulation
- Ensure the PDK output consistency through automatic comparison between pre-layout and post-layout simulations
- Supports comparison of the results from different combinations of the SPICE model, LVS and PE.
- Supports DC OP back-annotation function verification
- Supports PCell input variable function verification

Applications

- Foundry PDK development and verification
- Fabless & IP vendor evaluation and verification of foundries' process

Application Examples





	PQLeb 2000.00				
or you grater you	5 +				
Library Toront a Cilibrary	E Besst W.	niler X			
Tan Northol Wydd (PROD) Thijani, ac	e, 2 Gene	nel 🗆 COV 🗷 Celebrotic 🗆 Celebrotic 🗀 America			
E (0.15.1)	hame	Inhimation	Teatherch	Category	76
	Cathre 0.	Calibra BRC rule file rult set:	Grouphyth, 1	Seneral	п
	Caldet 0.	Calibre Eff.C failed numm 18	Owin Start 2, etc. 1	General	71
	AA,4+,X,	Space believes (AA or AADCM) is <= 10 SRC check meanings (F) width. SRC dark sharek solan samer SCRMA maken ya defined in sa	own free (ex.)	Celevated	1
	M,C,3	Maximum containing in-Zanghi of UCA is 20722	Own Town 2 doc 1	Cetevates	-11
	CC4N_3	Chamfor area size at the chip comer is Till. The chip edge is all ligners include BDDDEE;1310g invasid not interest with a factor. The DDC execution this section and shock on biblios. Note: 2. This nate section only appearance those copy and a factor. A section is a section only appearance there is not only any factor. As in come of the decimal is a round for the suiting to the other parts of the control of		Calibratic	
	(2862)		Own trees 2 along 1	Cathydec	-11
	BOHOUN, I	Designer secons additionally (CHREGODINS Artine Chg S. except CAMEA, CAMER CAMER in corner as defined in sale	OWN, SWITZ, BLL.	CHRINDRO	1
	37,58	poly enrorsum enclosed area is \$ 040	Own Start June 1	CHEMORE	711
	141.4	ME minimum area (The WET connected area apply SMMR c.	Owick Store 2 and 1	Cetented	70
	HI, SA	Essimum E1 area of margaril less density sincleus must ful. The definition of less density sincleus similare size 50.00°18. CO Macanum area of margaril less density sincleus < 1000. (3) Hankmum area of margarilles density sincleus < 1558. SIX dank sharek. SIX color before the region with earth of bibe-bing sincleus.		CARNONC	

